

The SKSS Importer converts Legacy SKSS files to HFSS Files. It maps the panels according to the chart below:

SKSS Panel Type	HFSS Panel Type
5700	6700
5808	6808
5820 (without voice)	6820
5820 (with voice)	6820EVS
IFP-50	IFP-75
IFP-100	IFP-300
IFP-1000	IFP-2100

The tool converts SBUS devices, SLC loops, input zones, output groups and point labels. It does not import any mapping.

How to use SKSS importer.

Open SKSS importer from desktop.



Once SKSS importer opens click on open account in lower right hand corner

Open Account

Browse to the SKSS file you would like to convert. Once the file is selected you should see fields populated on your screen.

Click Convert To HFSS Config in the lower right hand corner.

Convert To HFSS Config

A save dialog will open. Save this file where you can find it later.

This file can now be opened in HFSS version 7.0 or later.